



HP288V-LGS

安装说明书

Installation Instruction

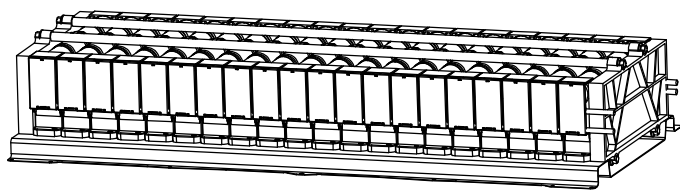

1.将电池模块按照图中标注极性放置,同时将原车温度传感器安装在02,08,13和18模块的底部。
Place the battery modules according to the polarity marked in the picture,and install the temperature sensors on the bottom of module 02,module 08,module 13 and module 18 .
将电池模块固定在原车底座上.安装M5螺栓时,先将螺栓拧进螺孔内,定位准确后拧紧M5螺栓。
Fix the battery modules on the base of original vehicle.First screw the bolts into the bolt holes when installing the M5 bolts,then tighten M5 bolts after accurate positioning.

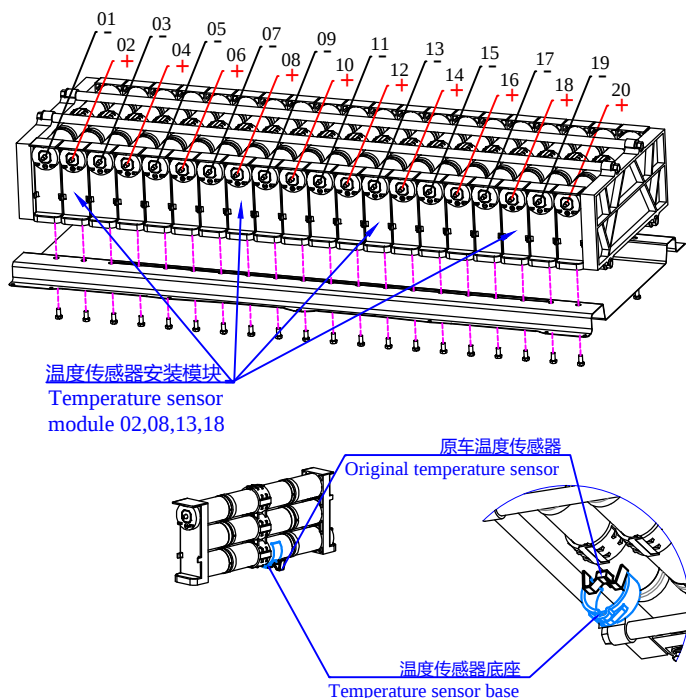


- ★注意：电池包安装由专业人员进行操作，电池包电压较高，存在着电击的危险，因此对电池包操作时，应佩戴绝缘手套，使用绝缘手柄工具。
- ★Notes：The installation of battery pack should only be attempted by a qualified technician.As the voltage of battery pack is very high,and there is shock hazard, so please wear insulating gloves and also use insulating handle tools when installing the battery pack.
- 1.电池包在安装过程中，按照组装说明书进行操作。
Operate according to the installation instruction.
 - 2.不能与其他厂家的电池模块或新旧电池模块混用，且电池包内电池模块不能与其它包电池模块混用。
Don't mix our battery modules with those of other manufacturers,or new battery modules with used battery modules,and don't mix battery modules within a battery pack with those in other battery pack.
 - 3.电池包组装过程严禁对电池模块及配件扭曲、弯折。
Don't twist and bend battery modules and accessories when assembling battery pack.
 - 4.电池包在组装时，电池模块的正、负极不能反接，防止短路。
Don't connect the anode and cathode of battery module in reverse when assembling battery pack. Prevent battery short circuit.
 - 5.螺栓、螺母紧固选用适当力矩，避免连接松动或力矩过大损坏其它配件。
Fasten bolts and nuts with appropriate torque,avoid loose connection or damaging other accessories with too large torque.


包装明细 Packing details

序号 NO.	名称 Name	数量 Number
1	电池模块 Battery module	P0304P 10
		P0304N 10
2	电压采集线束 Voltage acquisition wiring harness	1
3	温度传感器底座 Temperature sensor base	4
4	连接片 Connection piece	18
5	M5 螺母 M5 Nuts	40
6	M5 螺栓 M5 Bolts	40
7	绝缘套管 Insulating sleeve	2


2.按照蓝色箭头指示安装连接片,按照线束编号安装电压采集线束。
Install the connection pieces according to the indication of blue arrow and install voltage acquisition wiring harness according to the harness serial number.

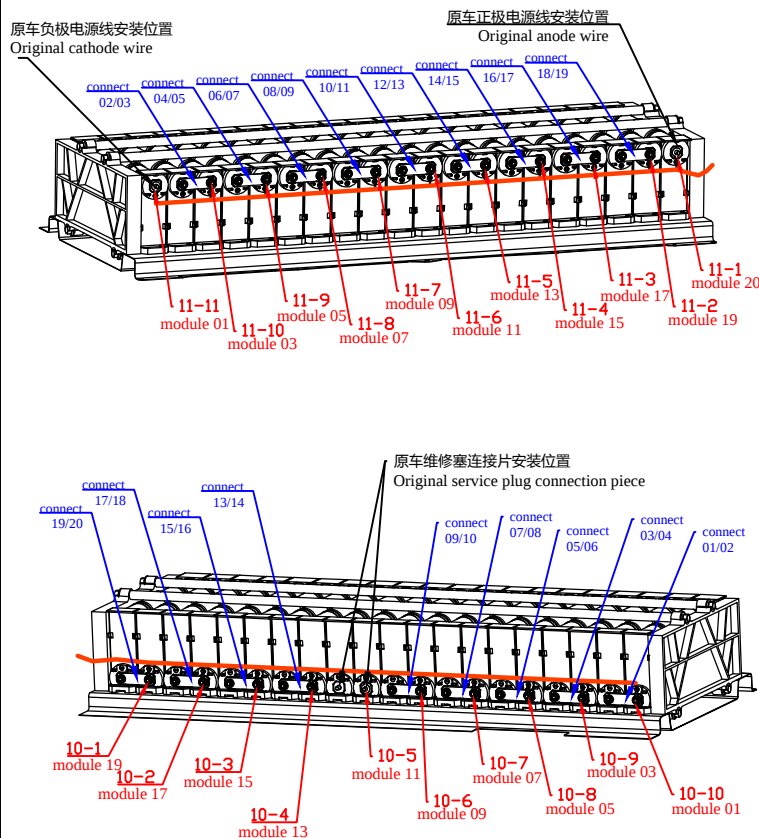

3.安装原车正负极总线及维修塞连接片。
Install original anode and cathode wires and connection piece of service plug.

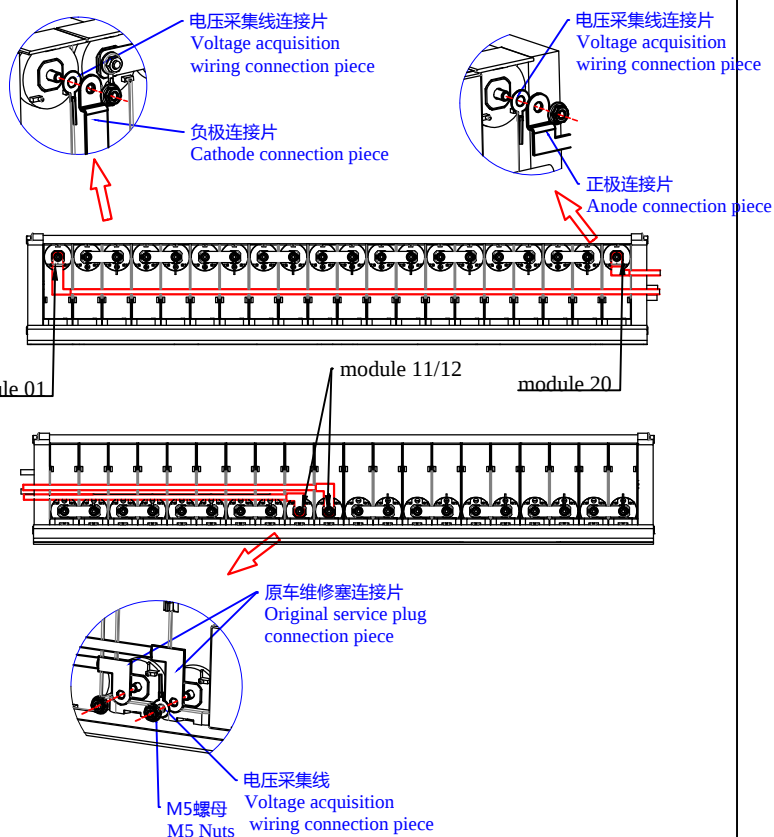

4.安装模块盖板.然后将绝缘套管安装在支架连接杆处。
Install the black module cover plates. Then install the insulating sleeve at the connecting rod of the bracket.

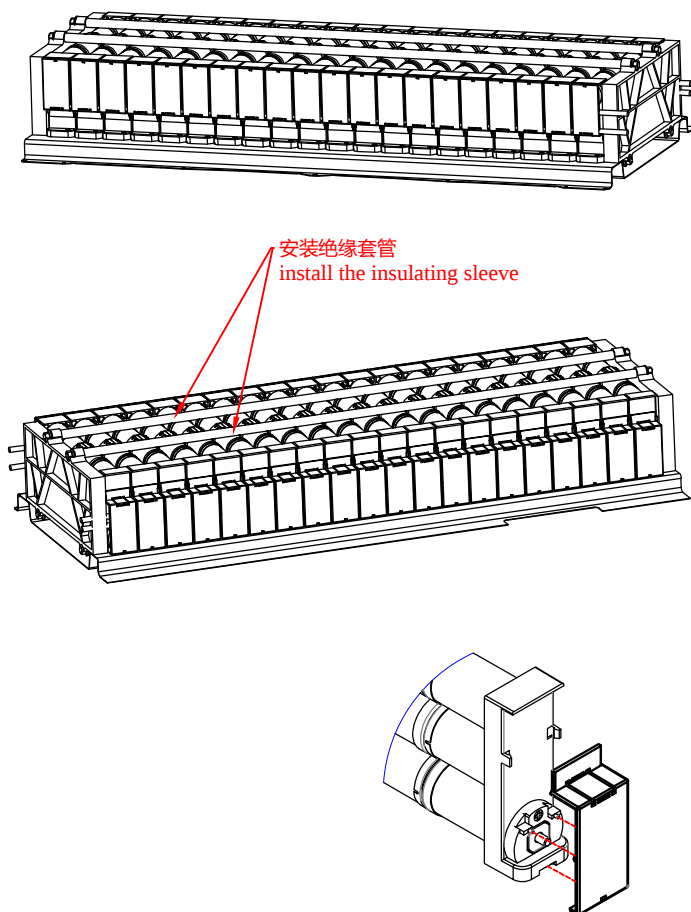

5.将40片盖板安装完成后,HP288V-LGS电池包安装完成。
Complete the installation of HP288V-LGS battery pack after installing 40 battery module cover plates.

6.安装电池包盖板,将电池包总成装回原车内,并正确连接所有部件。
Install battery pack ASSY cover plate, then put back in the vehicle and correctly connect all the accessories.

7.确认无误后,安装维修塞,启动车辆。
Install the original service plug after checking everything correctly. Finally start the vehicle.